



Before use, please read all instructions carefully prior to setting up the tent. Select a flat campsite free of rocks, branches, and other hard or sharp objects.

Warning: Keep away from overhead power lines.

- Never pitch the tent under trees, as there is a risk of lightning strikes or falling branches during severe weather.
- Always secure the tent using all provided stakes and guy lines to prevent property damage or personal injury.
- In windy conditions, for best performance, position the narrow end of the tent facing into the wind.
- Do not drop the tent or pole bag on its end, as this may cause damage.
- Do not shake or bounce the tent bag upside down to remove the tent, as this may damage the frame.
- Although the tent can be set up by one person, two people will make setup faster and easier.
- Do not use this product to cover vehicles, marine products, or similar items.
- Do not allow tent poles to strike against each other, as this may damage the pole ends.

Caution: Be aware of pinch points when opening and closing the tent frame.



Included Components:



Camping Tent x 1



Rainfly x 1



Ground Stakes x 8



Guy Lines x 4



Gear Loft x 1



Welcome Mat x 1



Accessory Bag x 1



Carry Bag x 1

Tent Setup Instructions

Step 1 – Prepare the Site



Select a relatively flat area free of rocks and debris. Remove the tent from the carry bag.

Step 2 – Unfold the Tent



Lay the tent flat on the ground. Unfold the leg poles along the seams until fully extended.

Step 3 – Raise the Roof Poles



Lift the arm joints upward until the top poles angle into position at the joints.

Step 4 – Extend and Lock the Poles



Extend each leg pole until the locking button clicks securely into place.

Step 5 – Attach the Rainfly and Guy Lines



Place the rainfly over the tent. Secure it using the plastic clips, then attach and tension the guy lines.

Tent Take-Down Instructions

Step 1 – Remove Stakes and Guy Lines



Detach and remove all ground stakes and guy lines.

Step 2 – Remove the Rainfly



Unclip the rainfly fasteners and remove the rainfly from the top of the tent.

Step 3 – Release Leg Attachments



Detach the clips or fasteners at the fold points on each tent leg.

Step 4 – Collapse the Poles



Press the locking buttons on each leg pole and allow the poles to retract.

Step 5 – Fold and Pack the Tent

Fold the tent inward from the connection points. Roll up the inner tent, then place the tent and all accessories into the carry bag.



Thank You for Your Order

Dear Customer,

Words cannot express how grateful we are that you have chosen Raynesys! Our Raynesys is, and always has been, committed to providing users with high-quality and cost-effective products that make their lives smarter and easier. Your trust is greatly appreciated!

If you have any questions about Raynesys Tents, please scan the QR code below and write down your questions, or you can send the relevant questions to the email below, we have a professional service team to solve your problems at the first time!

May all the goodness and warmth come as it should! Looking forward to your next visit and sincere suggestions.

E-mail: cs@raynesys.com